

# Shtender Supreme Assembly

## Part List

2 Large Black Washers



4 Wooden Dowels




2 Keys



4 Short Bolts




2 Long Bolts



2 Plastic Caps




FRONT

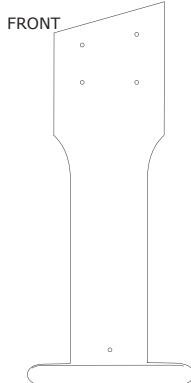


Left Side Panel

FRONT

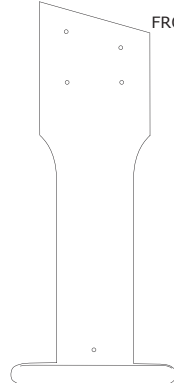


Right Side Panel

Footrest

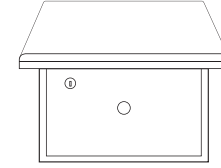


Tabletop

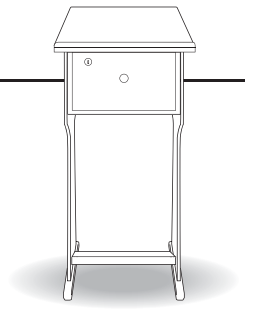

## Instructions

Tools: Phillips Screwdriver, Hex Key  
Time: 5 minutes

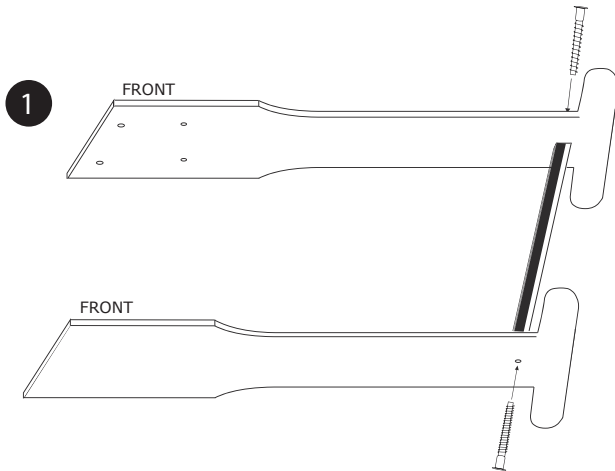


Lay both side panels on carpeted or protected floor with inner holes facing each other.

Using the long bolts (2), attach footrest to both side panels as shown. (Use black washers)


**DO NOT TIGHTEN FULLY until AFTER Step 6!**

- 2** Insert the 4 wooden dowels into top holes of the tabletop.

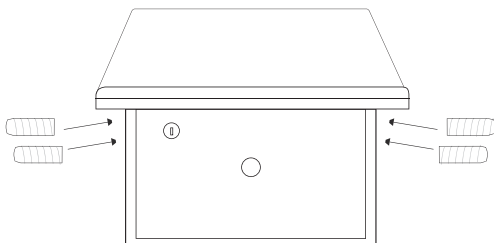

- 3** Stand up side panels.


- 4** Open tabletop door. Carefully place the tabletop between side panels, and align wooden dowels with top holes of side panels. Press firmly into place.

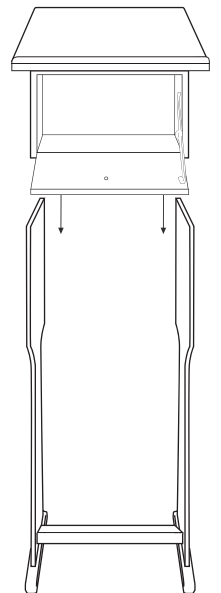

- 5** Align holes of tabletop and side panels. Insert and secure with the 4 short bolts from inside the tabletop compartment.

- 6** Tighten inside bolts with #1 Phillips screwdriver

**DO NOT OVER TIGHTEN!**

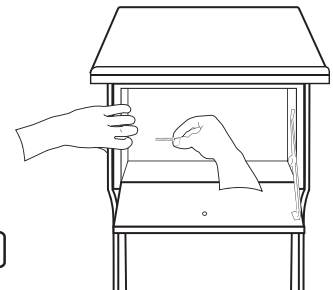

- 7** Tighten outer side panel (foot bar) bolts with the included hex key, and cover with the 2 plastic caps.

**DO NOT OVER TIGHTEN!**